

Betriebsanleitung
 Operating Instructions
 Instructions de service
 Istruzioni d'uso
 Handleiding
 Instrucciones para el manejo
 Manual de instruções
 Naudojimosi instrukcija
 Kasutusjuhend
 Lietošanas instrukcija
 Οδηγίες χρήσης
 取扱説明書
 사용설명서

Driftsinstruks
 Driftsinstruktioner
 Käyttöohje
 Driftsvejledning
 Instrukcja obsługi
 Kezelési útmutató
 Návod k obsluze
 Navodilo za uporabo
 Návod na obsluhu
 El Kitabi
 Инструкция по эксплуатации
 使用说明书

Picchio 2200

2006/42/EG









DIN EN ISO 14001:2005







DIN EN ISO 9001
001929 QM



			<p>MAX. VACUUM</p>	<p>MAX. VACUUM mbar</p>
				<p>MAX. V m³/h</p>
<p>AIR</p>			<p>DIN EN ISO 3744</p>	<p> $L_{pA} = 76 \text{ dB(A) - 50Hz}$ $L_{pA} = 79 \text{ dB(A) - 60Hz}$ $K_{pA} = 3 \text{ dB(A)}$ </p>

			<p>69 kg 152 lbs</p>	<p> $A > 100\text{mm}$ $A > 4"$ </p>	<p> $> 5^\circ\text{C}/41^\circ\text{F}$ $< 45^\circ\text{C}/113^\circ\text{F}$ </p>	<p>max. 90%</p>	<p>max. 800m</p>
<p>1</p>				<p>2</p>			

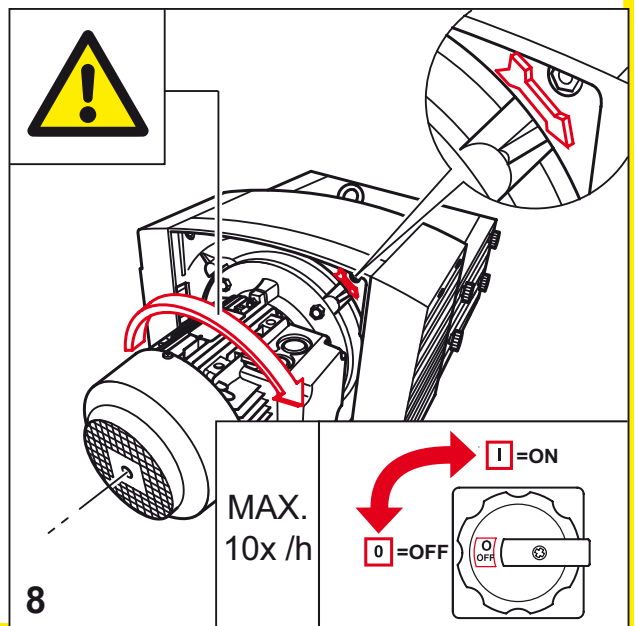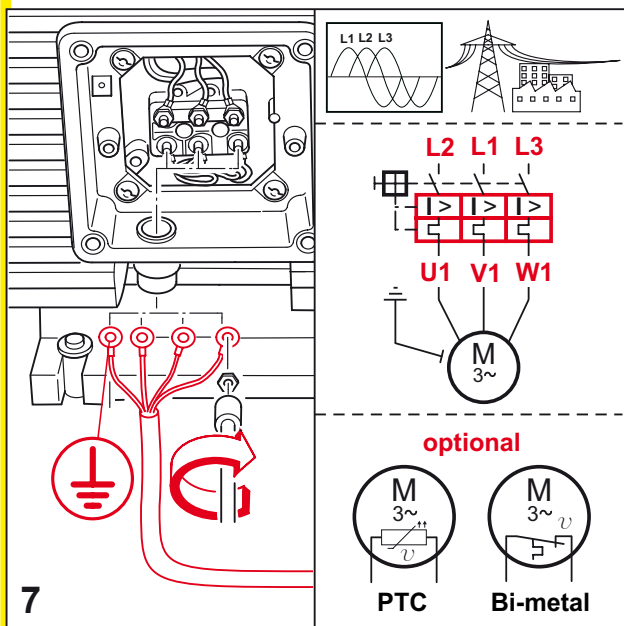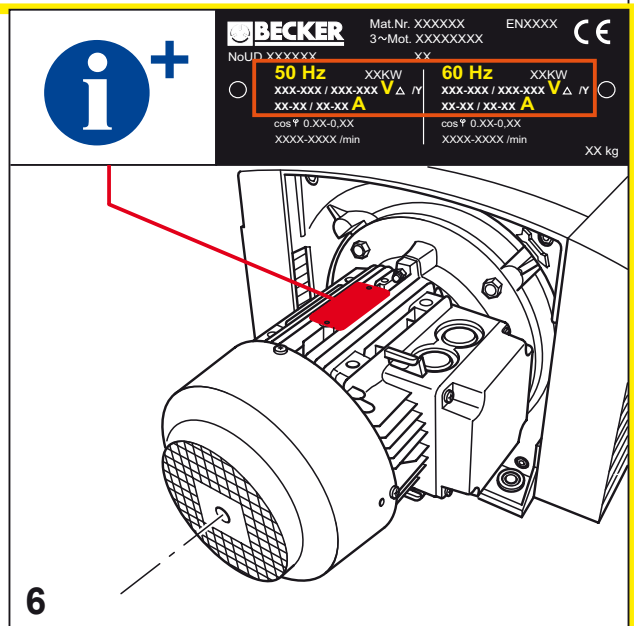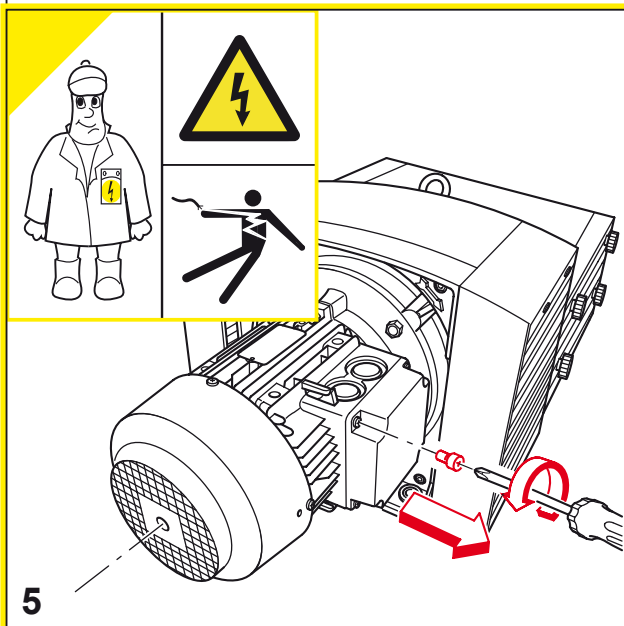
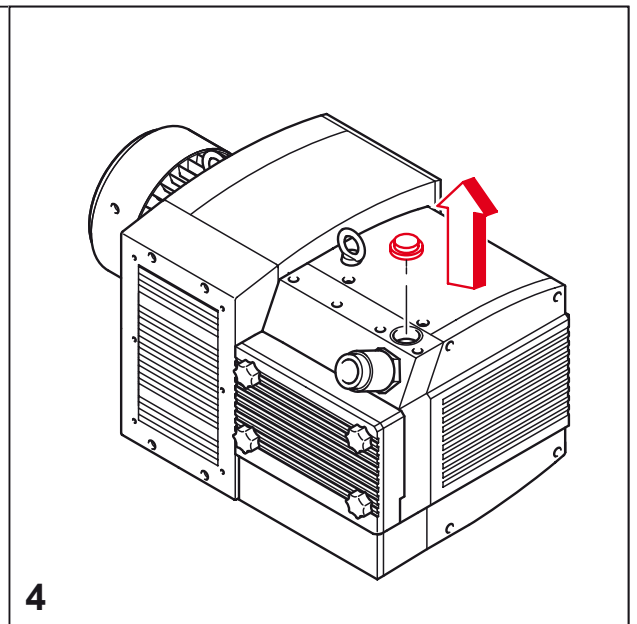
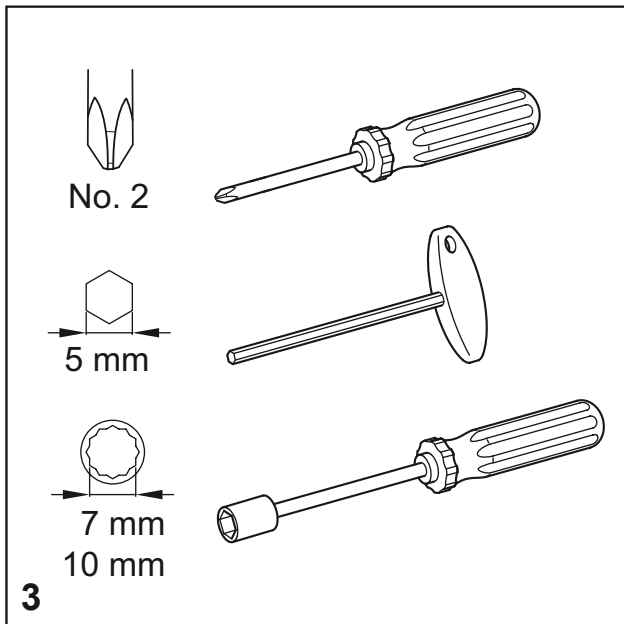



i+	BECKER Mat.Nr. XXXXXX 3~Mot. XXXXXXXX ENXXXX CE	
	No.Um XXXXXX	xx
<input type="radio"/>	50 Hz XXkW XXX-XXX / XXX-XXX V Δ /Y XX-XX / XX-XX A cos φ 0.XX-0.XX XXXX-XXXX /min	60 Hz XXkW XXX-XXX / XXX-XXX V Δ /Y XX-XX / XX-XX A cos φ 0.XX-0.XX XXXX-XXXX /min
		XX kg

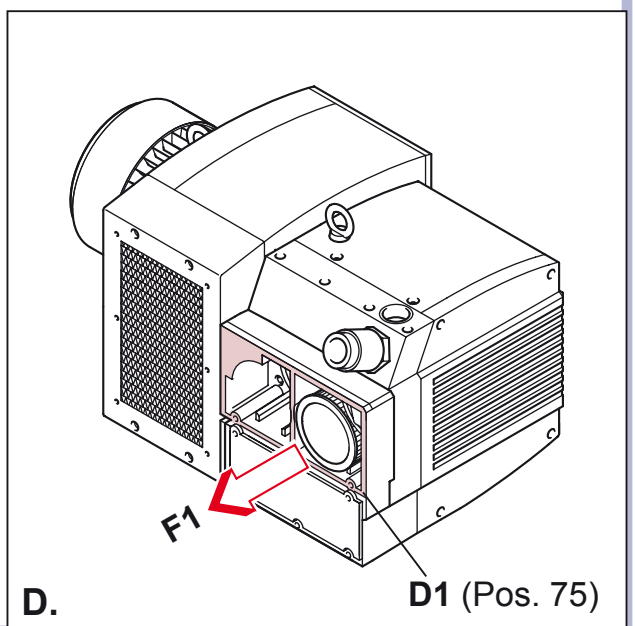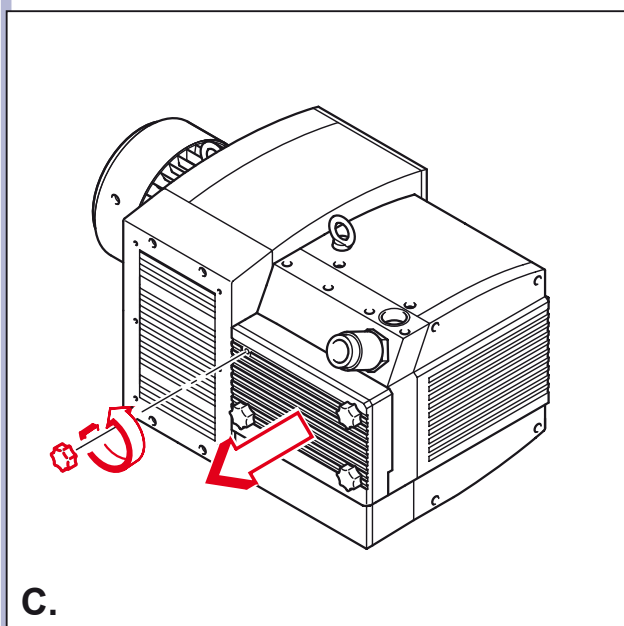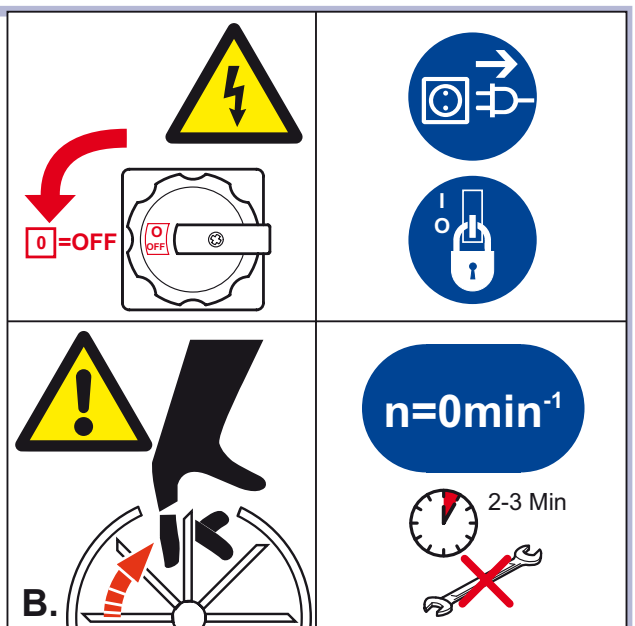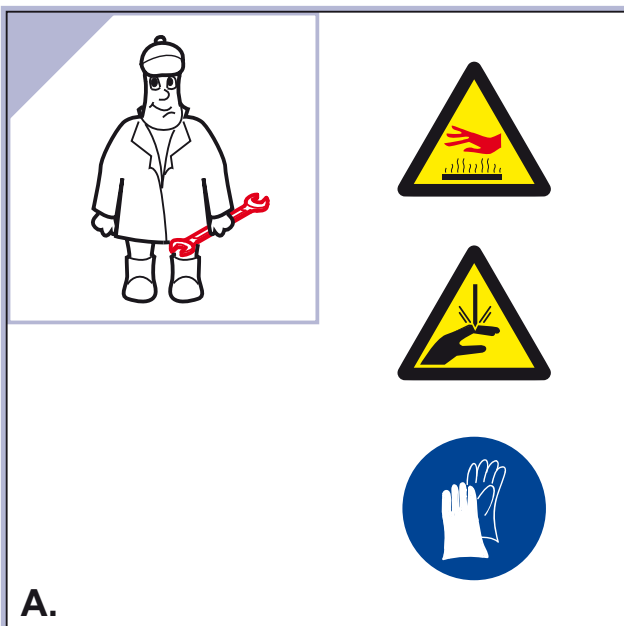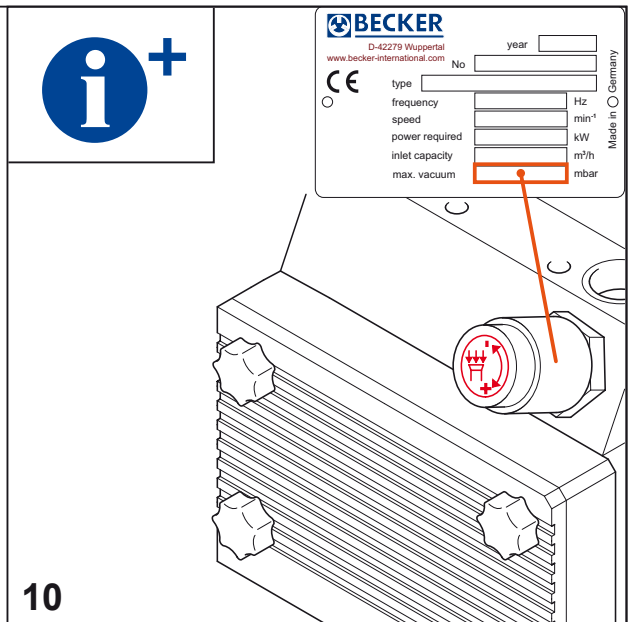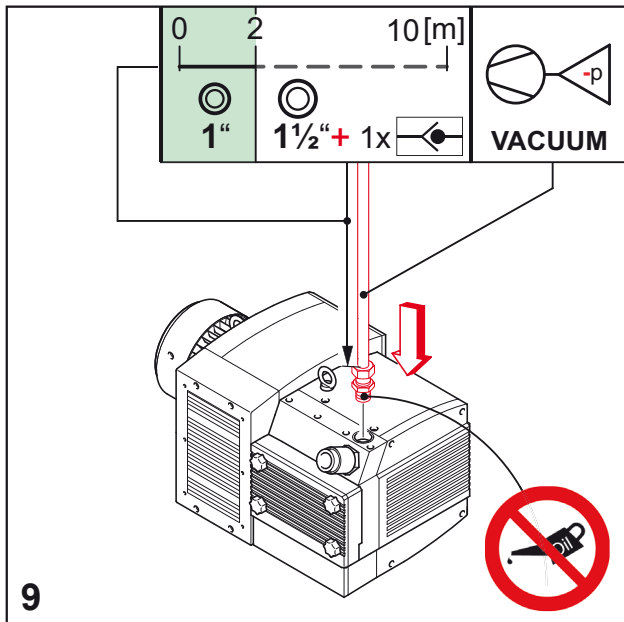
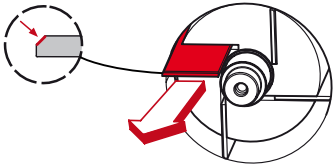
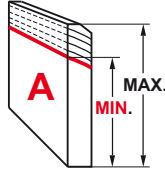


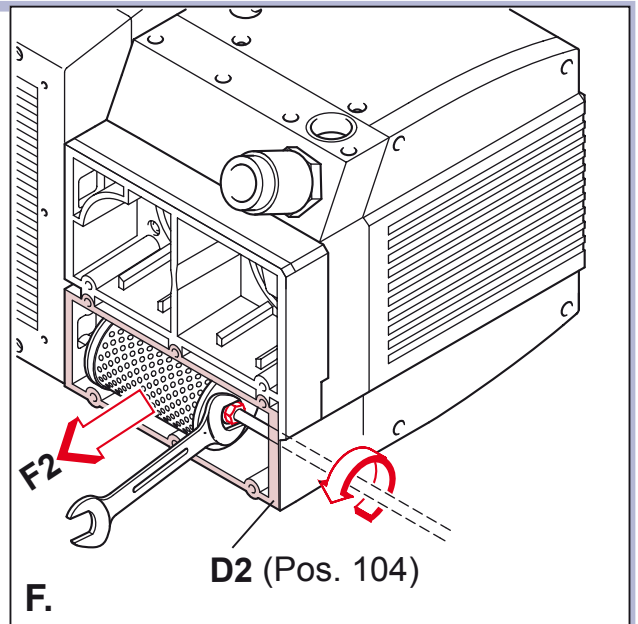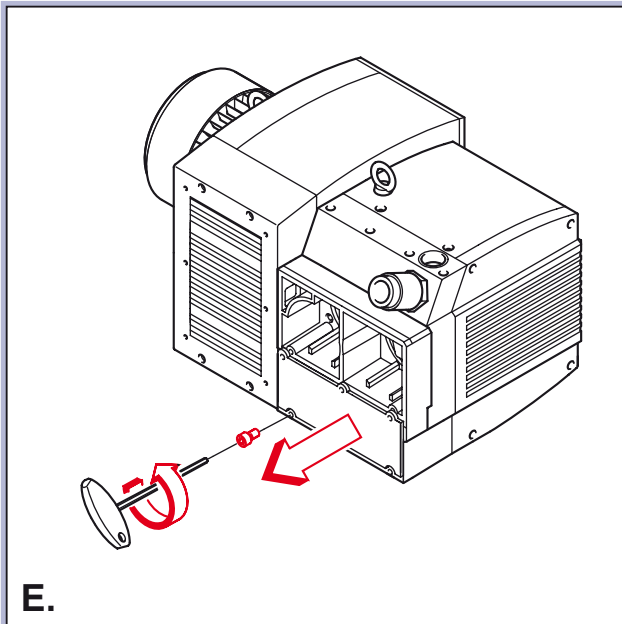


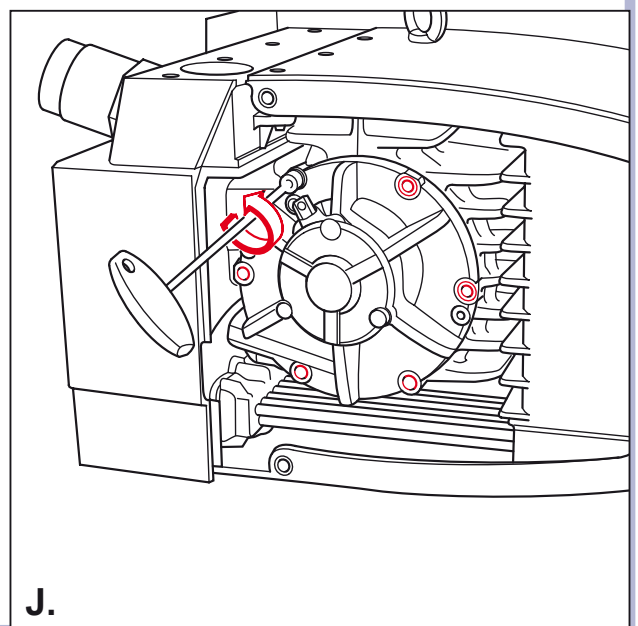
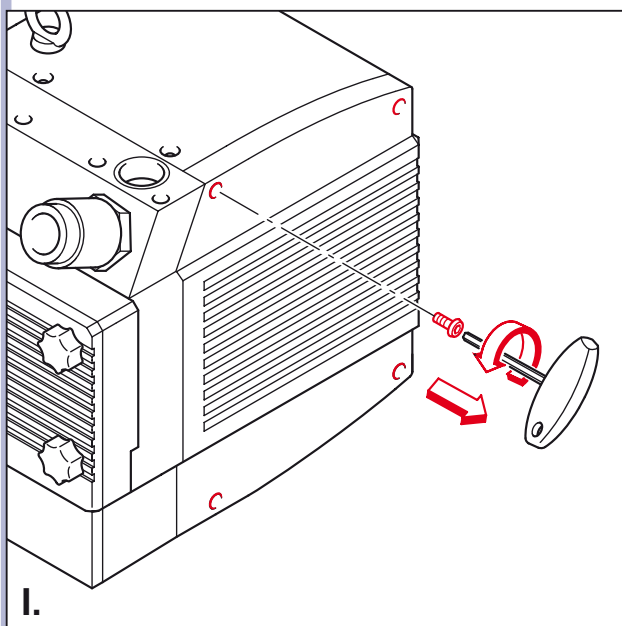
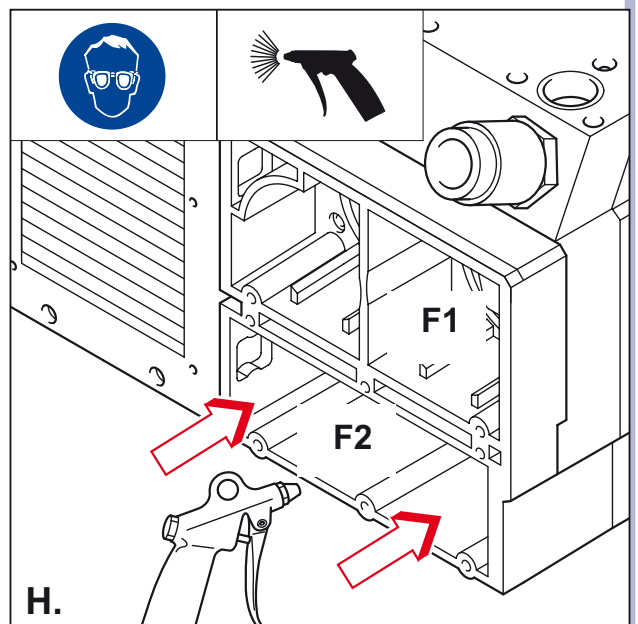



<p>F1 (standard) No.: 909507</p>		<p>F2 (standard) No.: 909510</p>
<p>D1 D2</p>	<p>Satz / Kit Pos.: 20, 24, 62, 75, 76, 85, 104, 125, 126, 127, 146, 288 No.: 549000 21100</p>	

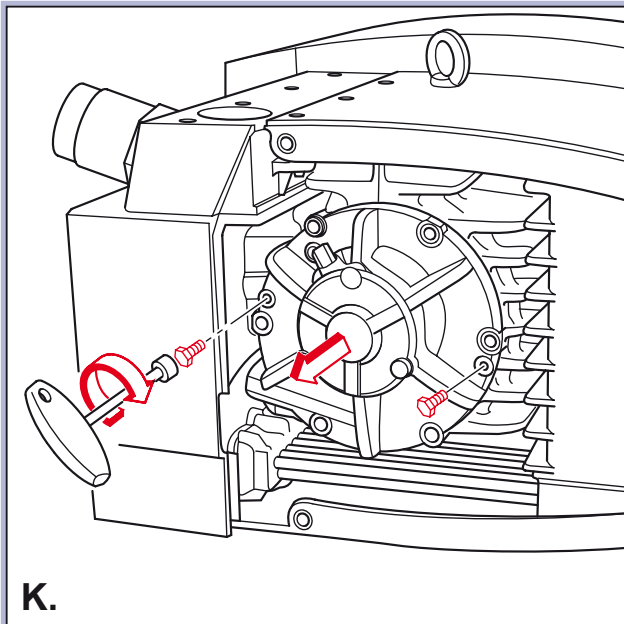



 3000 h	
	<p>$A_{MIN} > 31mm$ $A_{MIN} < 31mm$</p>  
<p>Picchio 2200 → No. 9013300004 (SET)</p> <p>L.</p>	

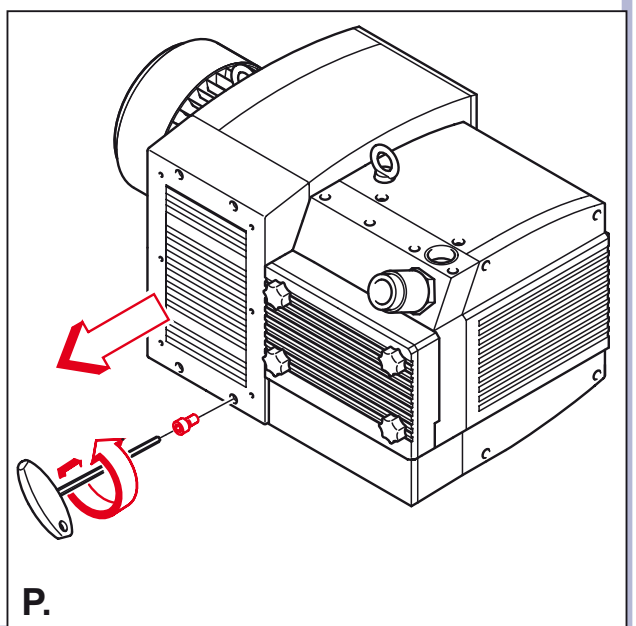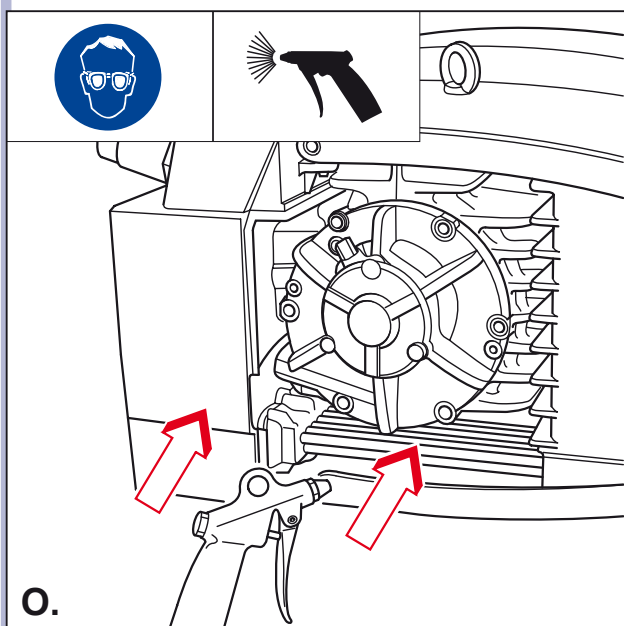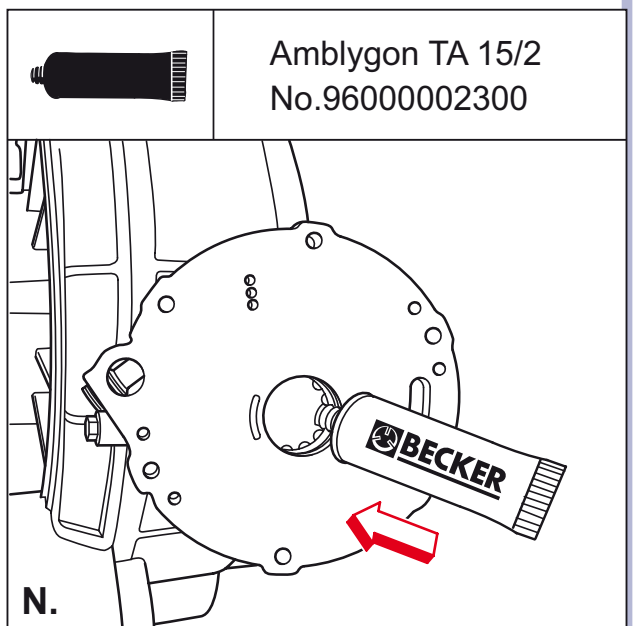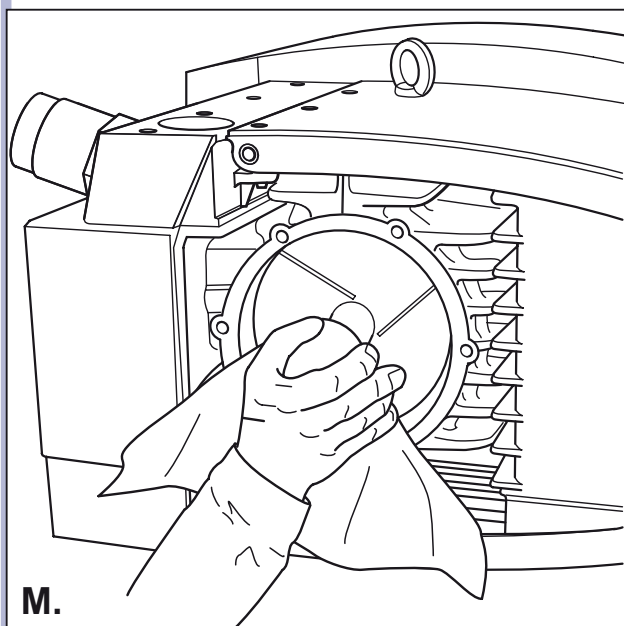

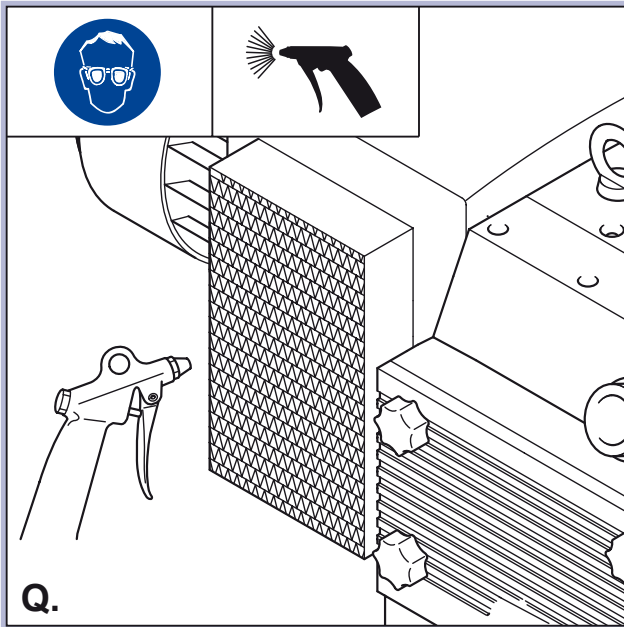

www.becker-international.com



Gebr. Becker GmbH
 Hölker Feld 29-31
 D-42279 Wuppertal
 info@becker-international.com

SERVICE
www.becker-international.com
 Sales and service network