

Betriebsanleitung
Operating Instructions
Instructions de service
Istruzioni d'uso
Handleiding
Instrucciones para el manejo
Manual de instruções
Naudojimosi instrukcija
Kasutusjuhend
Lietošanas instrukcija
Οδηγίες χρήσης
取扱説明書
사용설명서

Driftsinstruks
Driftsinstruktioner
Käyttöohje
Driftsvejledning
Instrukcja obsługi
Kezelési útmutató
Návod k obsluze
Navodilo za uporabo
Návod na obsluhu
El Kitabi
Инструкция по эксплуатации
使用说明书

U 4.40

2006/42/EG





DIN EN ISO 14001:2005



DIN EN ISO 9001
001929 QM

	<p>Becker Lube M/S/SL 100 ▷ 1,0 Liter</p>	<p>MAX. VACUUM</p>	<p>mbar</p>
<p>AIR</p>		<p>STANDARD</p>	<p> $L_{pA} = 69 \text{ dB(A)} - 50\text{Hz}$ $L_{pA} = 71 \text{ dB(A)} - 60\text{Hz}$ $K_{pA} = 3 \text{ dB(A)}$ </p>


	<p> $A > 100\text{mm}$ $A > 4"$ </p>	<p> $> 5^\circ\text{C}/41^\circ\text{F}$ $< 40^\circ\text{C}/104^\circ\text{F}$ </p>	<p>max. 90%</p>	<p>max. 800m</p>
<p>1</p> <p>38,0 kg 83,8 lbs</p>	<p>2</p>			

 **Becker Lube M 100 (Mineral oil)**
 ▷ No.: 96000900000 (1l)
Becker Lube S 100 (Synthetic oil)
 ▷ No.: 96001600100 (1l)
Becker Lube SL 100 Food
 ▷ No.: 96002300100 (1l)


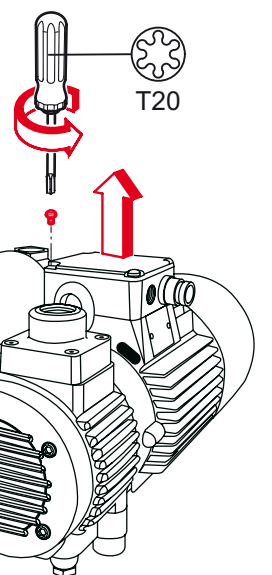
 **1,0 Liter**

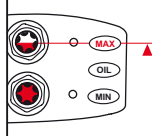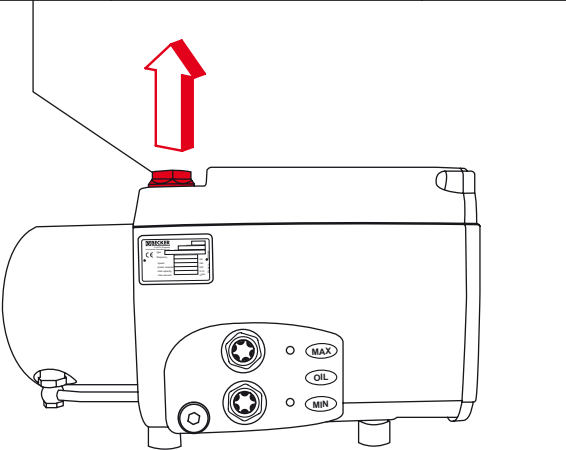3

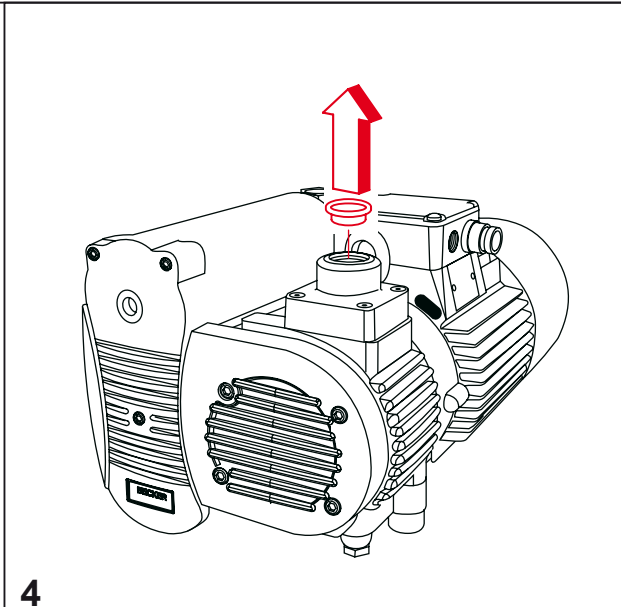


4


T20

5



 **BECKER** Mat.Nr. XXXXXX ENXXXX CE
 3~Mot. XXXXXXXX
 NoUp xxxxxxxx xx

50 Hz	XXKW	60 Hz	XXKW
XXX-XXX / XXX-XXX V Δ / Y	XXX-XXX / XXX-XXX V Δ / Y	XXX-XXX / XXX-XXX V Δ / Y	XXX-XXX / XXX-XXX V Δ / Y
XX-XX / XX-XX A	XX-XX / XX-XX A	XX-XX / XX-XX A	XX-XX / XX-XX A
cos φ 0.XX-0.XX	cos φ 0.XX-0.XX	cos φ 0.XX-0.XX	cos φ 0.XX-0.XX
XXXX-XXXX /min	XXXX-XXXX /min	XXXX-XXXX /min	XXXX-XXXX /min

XX kg

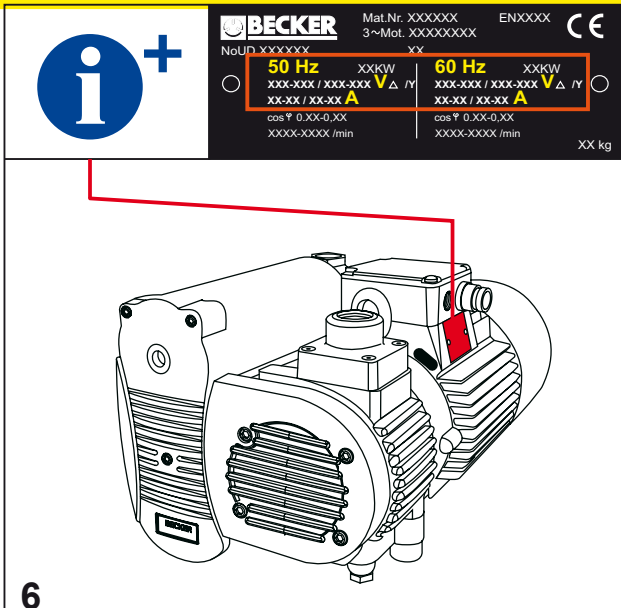

6

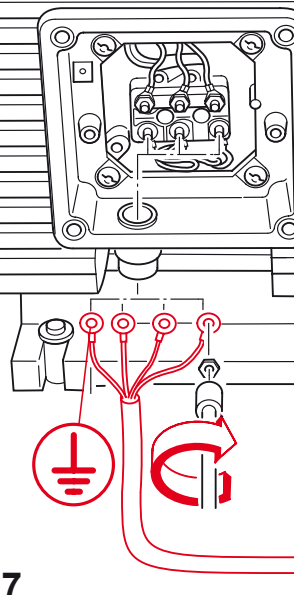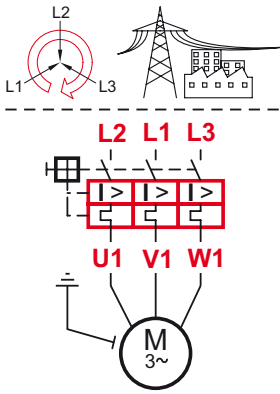



L2 L1 L3

U1 V1 W1


M 3~

optional

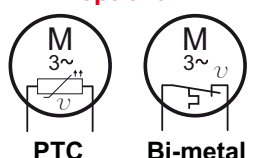

PTC **Bi-metal**

7

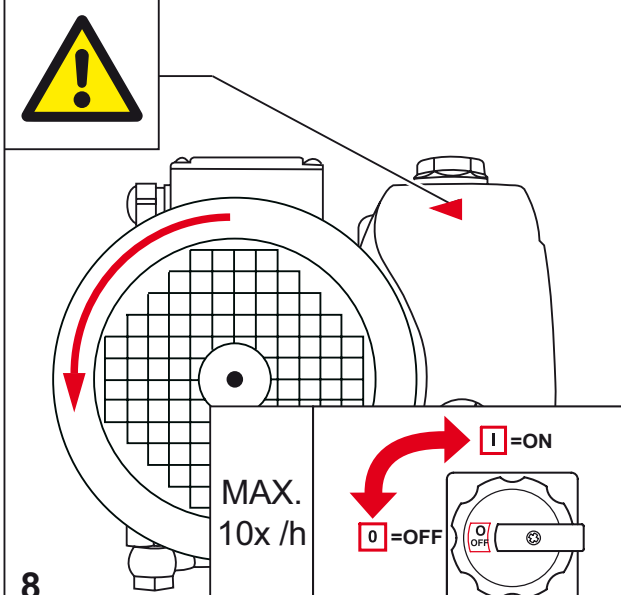

MAX. 10x /h

0 = OFF **I = ON**

8

< 2m $\phi 1''$
 > 2m...10m $\phi 1\frac{1}{2}''$

9

optional
 en option
 optionale
 opcional

10

? **AIR** optional
 en option
 optionale
 opcional

 
11

AIR

12

~~PRESSURE~~

13



A.

Person in protective gear, Fire hazard, Hand injury, Hand wearing a glove.

B.

Lightning bolt, OFF switch, Padlock, Warning sign, Hand holding wheel, $n=0\text{min}^{-1}$, 2-3 Min, Crossed-out wrench.

C.

MAX, MIN, 40 h, Person with magnifying glass, Warning sign, **Becker Lube M/S/SL 100**

D.


E.

Oil level diagram (MAX), 1. = 100 h, 2. = 500 h, 3. = 1.000 h, ... (min. 2x/a), Oil can, Recycling symbol


10

F.


Oil level diagram (MAX), 1,0 Liter, Becker Lube M 100 (Mineral oil) No.: 96000900000 (1l), Becker Lube S 100 (Synthetic oil) No.: 96001600100 (1l), Becker Lube SL 100 Food No.: 96002300100 (1l)




40 - 200 h **AIR ?**

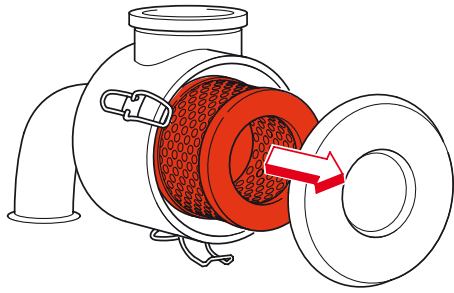


G.





1000 h

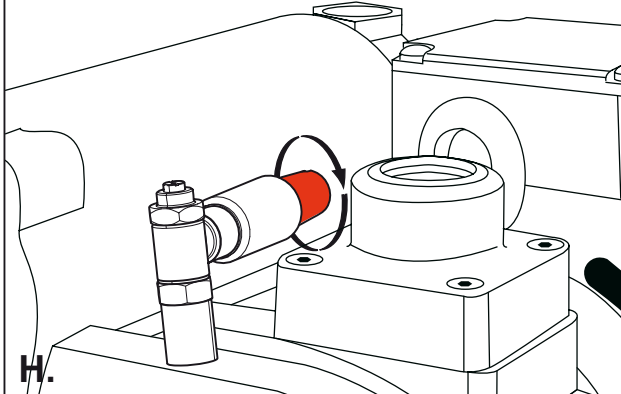


H.



 
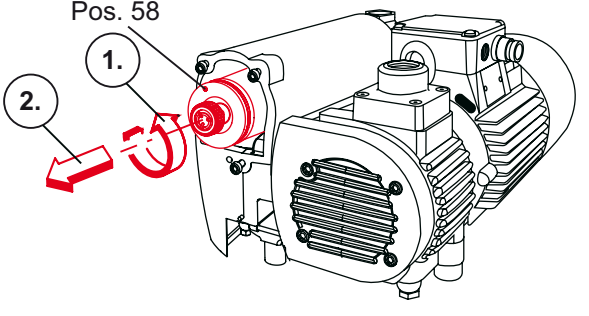
2000 h

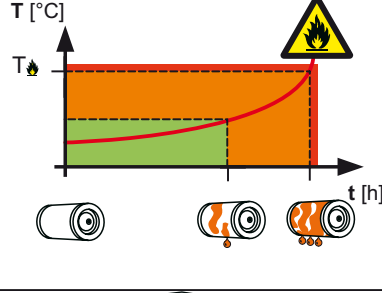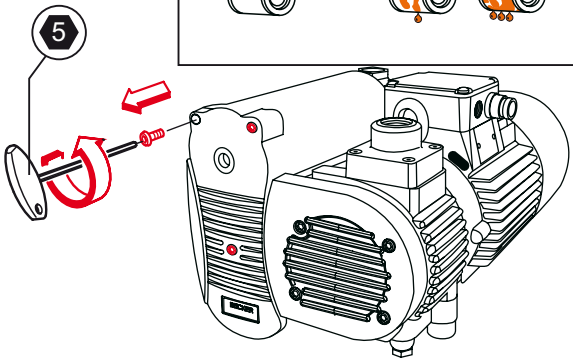
I.




Pos. 58
No.: 96541400000


J.




Clean

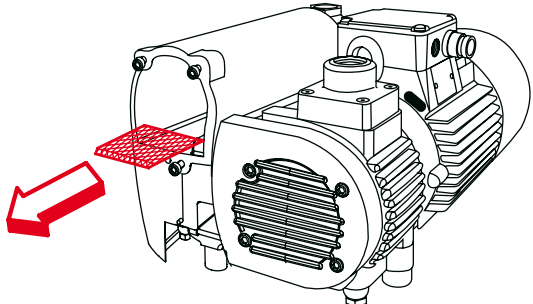

K.

 



BECKER
Betriebsanleitung Diferenciaci3n
Operating Instructions Diferenciaci3n
Instructions de service K3differenciaci3n
Instrucciones de uso Diferenciaci3n
Handboek Instrukcja obslugi
Instrucciones para el montaje Instrucciones de montaje
Manual de instruci3n N3vod k obsluze

?

i+

www.becker-international.com

BECKER

Gebr. Becker GmbH
H3lker Feld 29-31
D-42279 Wuppertal

info@becker-international.com

(D) Service:
Tel: +49 (0)202 697-171
Fax: +49 (0)202 64 44 74