

Betriebsanleitung
Operating Instructions
Instructions de service
Istruzioni d'uso
Handleiding
Instrucciones para el manejo
Manual de instruções
Naudojimosi instrukcija
Kasutusjuhend
Lietošanas instrukcija
Οδηγίες χρήσης
取扱説明書
사용설명서

Driftsinstruks
Driftsinstruktioner
Käyttöohje
Driftsvejledning
Instrukcja obsługi
Kezelési útmutató
Návod k obsluze
Navodilo za uporabo
Návod na obsluhu
EI Kitabi
Инструкция по эксплуатации
使用说明书

U 4.400

2006/42/EG



DIN EN ISO 14001:2005

DIN EN ISO 9001
001929 QM

<p>Becker Lube M/S/SL 100 ▷ 14,0 Liter</p>		<p>MAX. VACUUM</p>		mbar
			<p>MAX.</p>	
<p>AIR</p>		<p>DIN EN ISO 3744</p>	<p>$L_{pA} = 78 \text{ dB(A)} - 50\text{Hz}$ $L_{pA} = 81 \text{ dB(A)} - 60\text{Hz}$ $K_{pA} = 3 \text{ dB(A)}$</p>	

<p>400 kg 882 lbs</p>		<p>$A > 100\text{mm}$ $A > 4''$</p>	<p>$> 5^\circ\text{C}/41^\circ\text{F}$ $< 40^\circ\text{C}/104^\circ\text{F}$</p>	<p>max. 90%</p>	<p>max. 800m</p>
<p>1</p>		<p>2</p>			

28100026600 01/10

Becker Lube M 100 (Mineral oil)
 ▷ No.: 96000900000 (1l)
 ▷ No.: 96000900200 (5l)
Becker Lube S 100 (Synthetic oil)
 ▷ No.: 96001600100 (1l)
 ▷ No.: 96001600200 (5l)
Becker Lube SL 100 Food
 ▷ No.: 96002300100 (1l)
 ▷ No.: 96002300200 (5l)

MAX

14,0 Liter

3

4

5

6

BECKER Mat.Nr. XXXXXX ENXXXX CE
 3~Mot. XXXXXXXX
 NoUn XXXXXXXX xx

50 Hz	XXKW	60 Hz	XXKW
XXX-XXX / XXX-XXX V Δ / Y		XXX-XXX / XXX-XXX V Δ / Y	
XX-XX / XX-XX A		XX-XX / XX-XX A	
cos φ 0,XX-0,XX		cos φ 0,XX-0,XX	
XXXX-XXXX /min		XXXX-XXXX /min	

XX kg

7

L2 L1 L3

U1 V1 W1

optional

PTC Bi-metal







8

Pt 100

T_{MAX}

optional
 en option
 optionale
 opcional

No.: 94340190000 - 230V
 No.: 94340190200 - 24VDC
 No.: 94340190100 - 115V

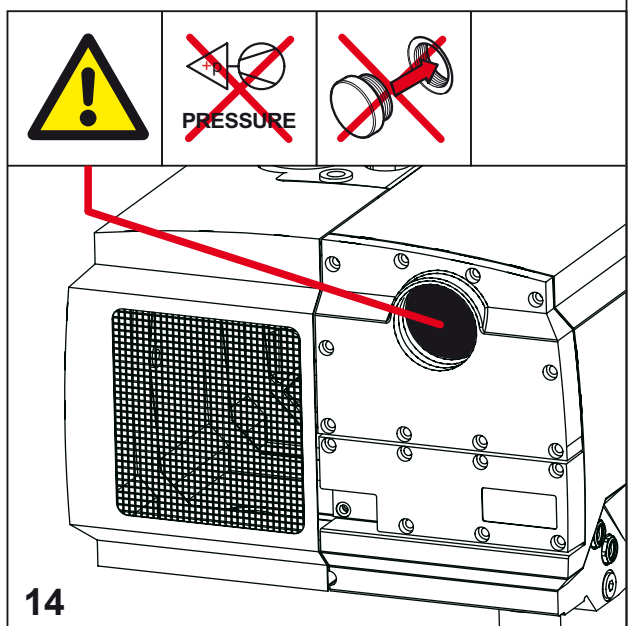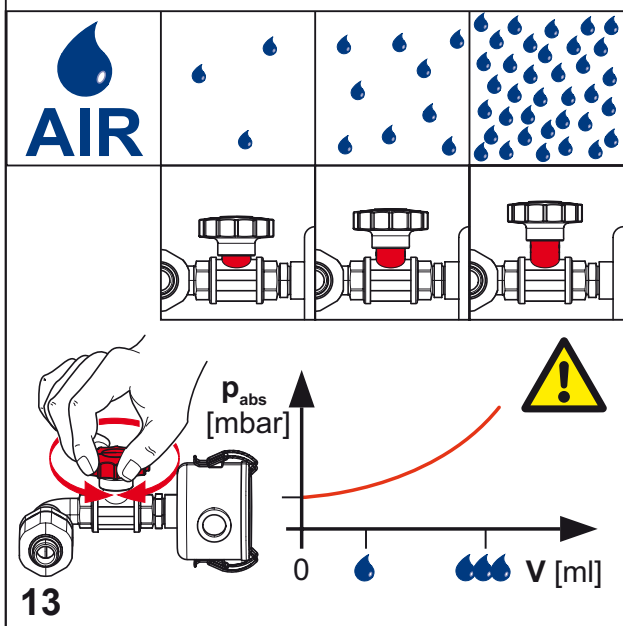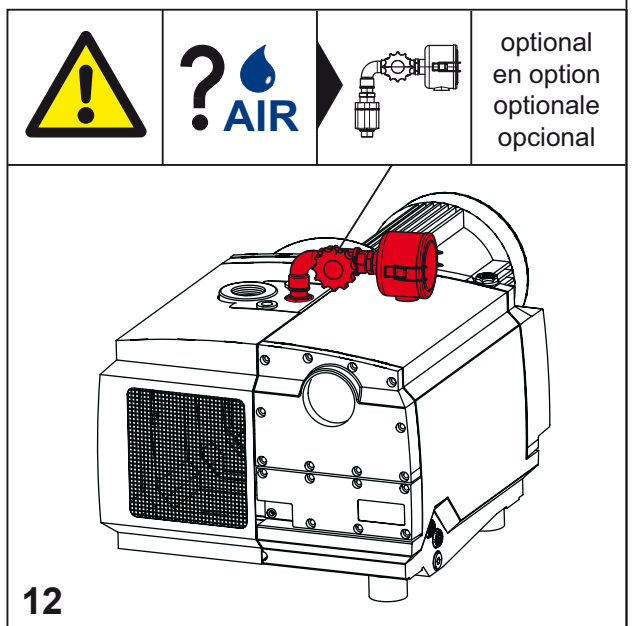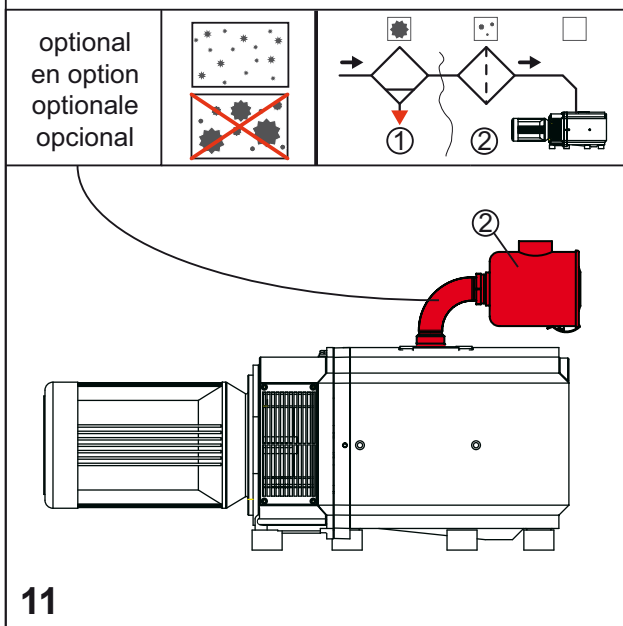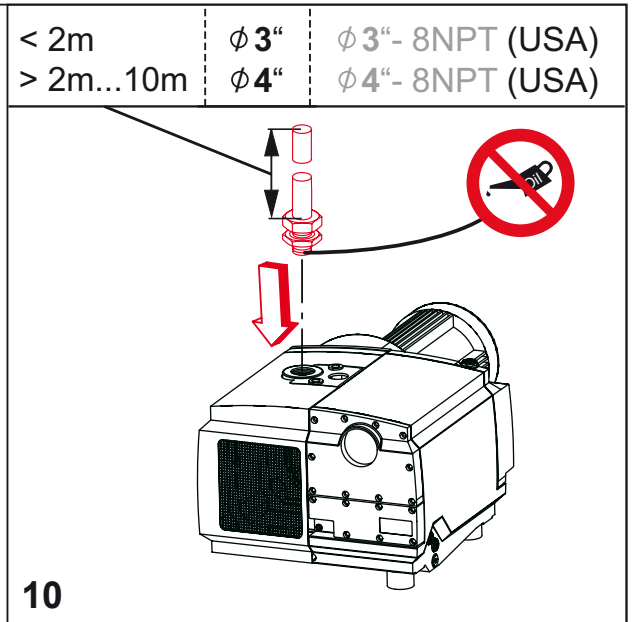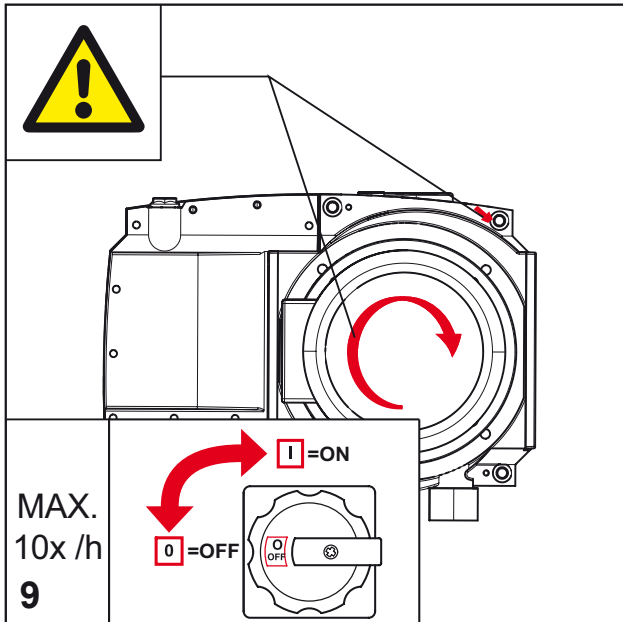

A.

Worker in protective gear, fire hazard, hand injury, and gloves.

B.

Electrical hazard, power switch, lock, speed indicator ($n=0\text{min}^{-1}$), and a clock showing 2-3 minutes.

C.

Oil level indicator showing MAX and MIN levels, a worker with a magnifying glass, and a warning sign for low oil.

D.

Eye protection and a spray gun.

C.

Diagram of the motor housing with a red dashed circle highlighting the oil level indicator area.

F.

Diagram of the motor housing with a red arrow pointing to the oil level indicator.

Becker Lube **M 100** (Mineral oil)
 ▷ No.: 96000900000 (1)
 ▷ No.: 96000900200 (5)
 Becker Lube **S 100** (Synthetic oil)
 ▷ No.: 96001600100 (1)
 ▷ No.: 96001600200 (5)
 Becker Lube **SL 100 Food**
 ▷ No.: 96002300100 (1)
 ▷ No.: 96002300200 (5)

14,0 Liter


MAX

E.


Diagram of the motor housing with a red arrow pointing to the oil level indicator and a recycling symbol.

Oil


1. = 100h
 2. = 1.000h
 3. = 2.000h
 ... (min. 2x/a)




40 - 200 h **AIR ?**

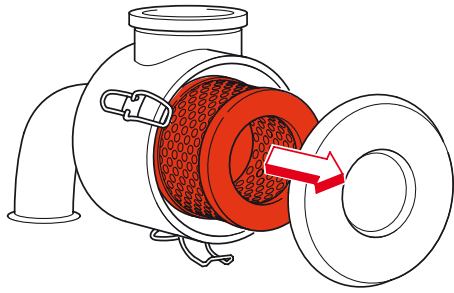


G.

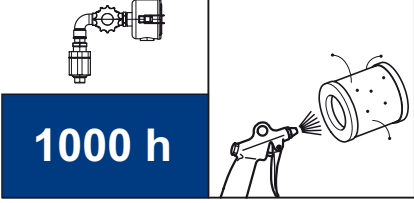


1000 h

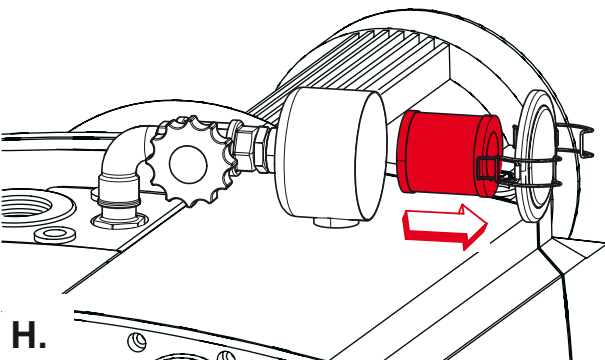


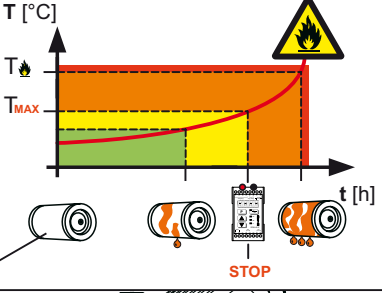
H.




2000 h

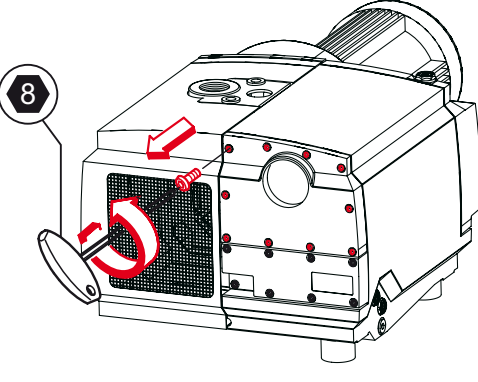


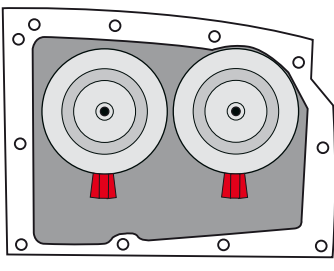
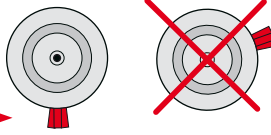
I.


J.




2x Pos. 89
No.: 9654100000

K.



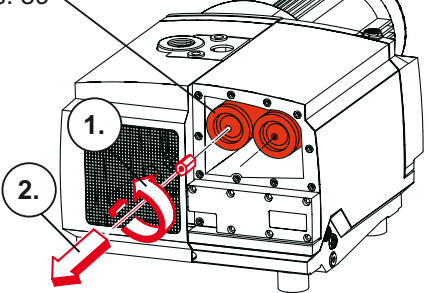

BECKER
Betriebsanleitung Diferenciaci3n
Operating Instructions Diferenciaci3n
Instructions de service K3differenciaci3n
Instrucciones de uso Diferenciaci3n
Handboek Instrukcja obslugi
Instrucciones para el montaje Instrucciones de montaje
Manual de instruci3n N3vod k obsluze

?

i+

www.becker-international.com

BECKER

Gebr. Becker GmbH
H3lker Feld 29-31
D-42279 Wuppertal

info@becker-international.com

(D) Service:
Tel: +49 (0)202 697-171
Fax: +49 (0)202 64 44 74