



















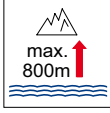

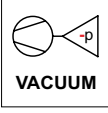
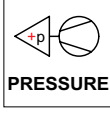
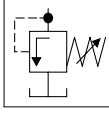
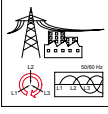
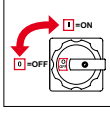
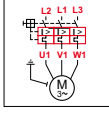
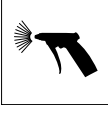




1. Warning Notice		
 <p>High Voltage Only qualified staff may work on electronic components</p>	 <p>High Voltage according to ANSI American, National Standards Institute</p>	 <p>Qualified Staff Marked operations may only be executed by qualified electricians</p>
 <p>Automatic Start-Up When servicing the device must be turned off</p>	 <p>Hot Surface will cause burns. Let device cool down before maintenance</p>	 <p>Note Ignoring notices will cause severe damage to the pump</p>
2. Interdiction		
 <p>Pump works without oil Avoid absorption of oil fumes</p>	 <p>Marked areas may not be subject to weight</p>	 <p>Liquids may not be conveyed</p>
 <p>Explosive substances may not be conveyed</p>	 <p>Flammable Substances may not be conveyed</p>	 <p>Toxic Substances may not be conveyed</p>
 <p>Assembly Incorrect fitting position</p>		
3. Rules		
 <p>Wear protective goggles</p>	 <p>Wear protective gloves</p>	 <p>Wear protective ear-muffs Sound level information e.g. 85 dB (A)</p>
4. Advice		
 <p>Active principle Rotary vane pump Only air may be conveyed</p>	 <p>Active principle side channel fan only air may be conveyed</p>	 <p>Maintenance Regularly execute the marked procedures</p>
 <p>Storing / Assembly Protect pump from humidity</p>	 <p>Assembly Characteristic data is valid up to 800m above sea level</p>	 <p>Further Information (optional Data) - name plate - Internet</p>
 <p>Specification Vacuum pump</p>	 <p>Specification Compressor</p>	 <p>Safety valve</p>
 <p>Factory-made Revolving field clockwise as pre-requisite for pump attachment</p>	 <p>Switch interval Not more than 10x per hour</p>	 <p>Arrange Motor-circuit switch</p>
 <p>Blow out marked areas with air pressure</p>	 <p>Maintenance interval Observe minimum gate valve measurement every 3.000 hours</p>	 <p>Filter Maintenance Service according to dust accumulation exchange old cartridge dispose old</p>